

Manual Projector Screens Return Function Trouble Shooting

1. If you cannot get the screen to retract take the screen off of the wall.
2. Move the screen to a slight angle backwards (behind the screen) and try again. This usually will sort out the problem.
3. Once having got it to retract the screen should loosen up (they may be stiff as they are brand new)
4. Repeat procedure a few times to make sure you can get it back into the casing.
5. Give the screen a few weeks to wear in, if you still have and problems please contact Crosby and Bown Ltd.